


# **XS237 Dimensions**

All dimensions listed in inches

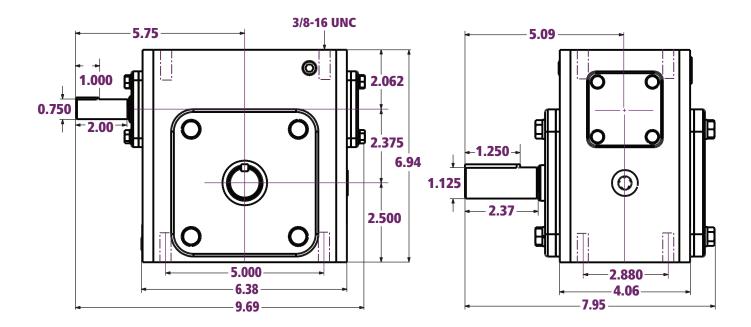

### Output and Input Shafts (in)

Output	Output	Input	Input
Keyway	Shaft Dia.	Keyway	Shaft Dia.
(in)	(in)	(in)	(in)
1/4 x 1/8	1.125	3/16 x 3/32	0.750

# **Specifications**

Center	Weight	Est. Oil Fill
Distance (in)	(lbs)	Amount* (oz)
2.375	36.3 [37.4 <sup>†</sup> ]	22.0

\*For Position 1.

 
#### **Ratios**

Nominal Ratios	Exact Ratios
5:1	5.3:1
10:1	10.3:1
15:1	15.5:1
20:1	19.5:1
30:1	30.0:1
40:1	40.0:1
50:1	50.0:1
60:1	60.0:1

## **Efficiency**

Nominal Ratios	Efficiency (%)
5:1	≈ 93
10:1	≈ 89
15:1	≈ 84
20:1	≈ 82
30:1	≈ 76
40:1	≈ 71
50:1	≈ 64
60:1	≈ 61


#### **Handing Types**




<sup>&</sup>lt;sup>†</sup>Approximate weight for LR Handing

# **XS237 Accessories**

 and X237 Base Kit Dimensions

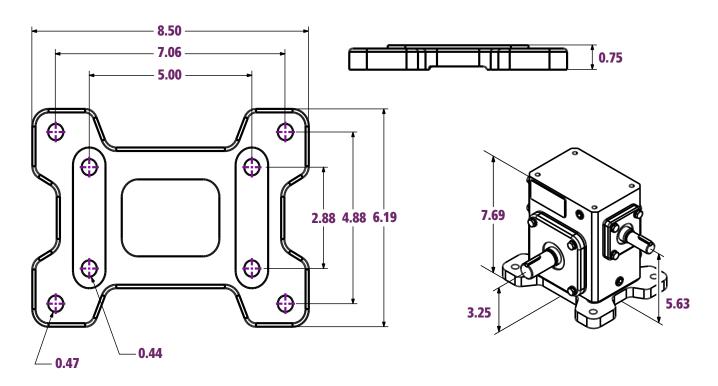




**Foot Mounted Base Kit** 

XBK237




**Component Repair Kit** 

 XSRK237



**Input Quill Adapter Option** 

Not Applicable

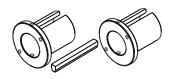


**Output Bushing Kits\*** 

Not Applicable



Output Bracket Kit\*

 XOB237



Torque Arm Kit\*

XTA237

\*Made to order.

