


# **XS325 Dimensions**

All dimensions listed in inches

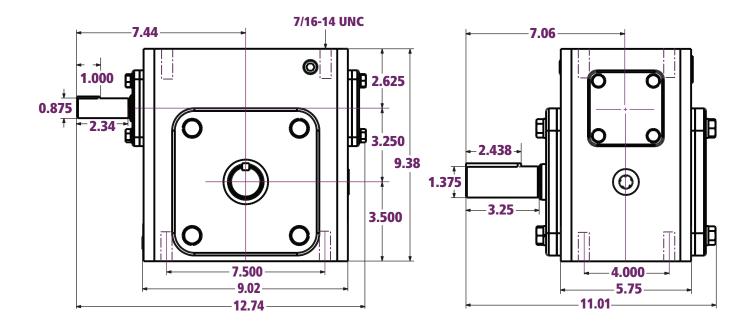

### Output and Input Shafts (in)

Output	Output	Input	Input
Keyway	Shaft Dia.	Keyway	Shaft Dia.
(in)	(in)	(in)	(in)
5/16 x 5/32	1.375	3/16 x 3/32	0.875

# **Specifications**

Center	Weight	Est. Oil Fill
Distance (in)	(lbs)	Amount* (oz)
3.250	73.7 [74.8 <sup>†</sup> ]	70.0

\*For Position 1.

 
#### **Ratios**

Nominal Ratios	Exact Ratios
5:1	5.3:1
10:1	10.3:1
15:1	15.5:1
20:1	19.5:1
30:1	30.0:1
40:1	40.0:1
50:1	50.0:1
60:1	60.0:1

## **Efficiency**

Nominal Ratios	Efficiency (%)
5:1	≈ 93
10:1	≈ 90
15:1	≈ 85
20:1	≈ 86
30:1	≈ 77
40:1	≈ 76
50:1	≈ 76
60:1	≈ 71


#### **Handing Types**




<sup>&</sup>lt;sup>†</sup>Approximate weight for LR Handing

# **XS325 Accessories**

 and X325 Base Kit Dimensions

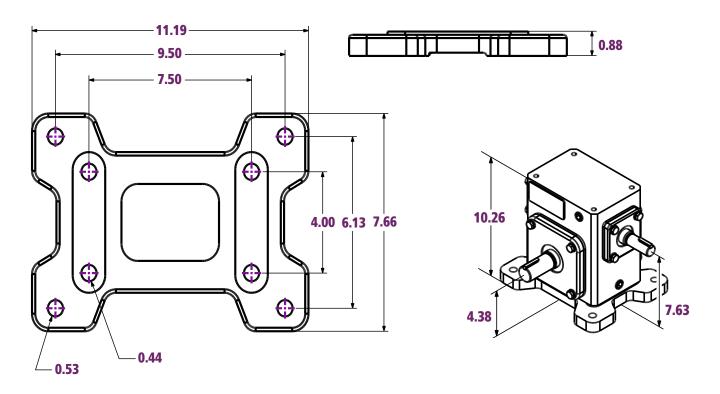




**Foot Mounted Base Kit** 

XBK325




**Component Repair Kit** 

 XSRK325



**Input Quill Adapter Option** 

 Not Applicable



**Output Bushing Kits\*** 

Not Applicable



Output Bracket Kit\*

XOB325



Torque Arm Kit\*

XTA325

\*Made to order.

